

CLEANING

Use a soft, damp cloth (with some detergent, if required) for cleaning.

Do not use scratching and scouring cleaning agents, scourers, steel wool etc.

Always remember the following points:

1. Remove the mains plug from the wall socket before cleaning the appliance.
2. Prevent water from running into the appliance.
3. Cleaning is easiest when the appliance is cool.

The removable stainless steel bowls can be washed and are dishwasher safe.

This appliance is intended to be used in household and similar applications such as:

- Staff kitchen areas in shops, offices and other working environment.
- Farm houses.
- By clients in hotels, motels and other residential type environment.
- Bed and breakfast type environment.

Guarantee

The product is guaranteed for one year after date of purchase against factory defaults.

Leaning on glass doors and abuse of doors are not covered by guarantee.

Thank you for buying our

***HOTTESS
/ SERVER***

Warmer Trolley

Dual Elements / Server

Instructions for use

Caution: Please keep children away as the warmer trolley gets hot

WHAT IS THE “HOTTESS”

The “HOTTESS” has been designed to keep a meal appetizingly hot from the time it is cooked until it is convenient to serve, which provides complete flexibility when entertaining or when the meal is to be kept hot for later-comers.

IMPORTANT

Please read these instructions carefully before you attempt to use the appliance. Keep these instructions for future reference.

BEFORE USING FOR THE FIRST TIME

Before using for the first time remove all packaging material.

NB! DO NOT LEAN ON GLASS DOORS

It is recommended that two people handle the trolley when carrying it.

The appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience or knowledge, unless they have supervision or given instruction in the use of the appliance by a person responsible for their safety.

- a. Recommended for indoor use only.
- b. Before connecting the appliance, check that the voltage of 220V corresponds to the mains voltage in your home.
- c. The appliance should be connected to an earthed main socket.
- d. If the supply cord is damaged, it must be replaced by a special cord or assembly available from the manufacturer or its service agent.
- e. When in use, the appliance is HOT. Never leave objects on, or leaning against, it after switching it on.
- f. Always allow sufficient space around the appliance.
- g. Avoid touching the hot parts of the appliance, especially small children.
- h. Wear kitchen gloves or use a cloth when removing the dishes, etc. from the appliance.
- i. Never touch the heating elements.
- j. Avoid scratching the inside of the application when placing or removing plates or dishes.
- k. Children should be supervised to ensure they do not play with the appliance.
- l. Do not allow the main cord to touch the hot parts of the appliance.
- m. Food should not be re-heated in this appliance.
- n. Do not cover with clothing, etc., any heating appliance that is or has recently been switched on. Overheating can cause damage and shorten the life of your equipment.

- o. The top sliding leaves on trolley models are very useful when carving or serving, **but a protective mat must be used under hot plates, dishes or pots especially if taken direct from the stove or oven to prevent surface damage.**
- p. The appliance must be positioned so that the plug is accessible.
- q. Heat rises so the top shelf will be approximately 6°-10° degrees warmer. Aluminium is a bad conductor of heat and is not recommended as a container.
- r. When this appliance is heating up the body expands accordingly and a slight noise may be heard but is completely normal.
- s. Every endeavour is made to ensure the powder coated surface is correctly prepared before application. We do however not guarantee against corrosion if within 2km of the ocean.

PRE-HEATING

Plug in and pre-heat the “Hottess” whilst the food is being cooked. Allow 15-20 minutes pre-heat time to ensure that your “Hottess” operates efficiently. To avoid breakage due to “thermal shock”, dishes and plates can be effectively warmed inside the “Hottess” while pre-heating the appliance.

USING THE “HOTTESS”

The “Hottess” Trolley will not operate until connected to a main supply. The red neon light on the switch of the trolley will indicate that the power is on. To obtain the best results from the trolley, the food should be placed in flat bottomed dishes with lids and at a temperature of between 70°- 80° is ideal in order not to dry out food.

The stainless steel dishes under the sliding leaves should be used for moist foods such as vegetables, etc. and are removable for easy cleaning.

The shelves may be wiped with a wet cloth. CARE must be taken when removing the shelves as they can be sharp in places.

COVERING THE SHELVES WITH TINFOIL IS AN OPTION IN KEEPING THEM CLEAN, BUT MUST HAVE HOLES PIERCED TO MATCH THE EXISTING ONES IN THE SHELF SO AS TO ALLOW THE HEATED AIR TO CIRCULATE – FAILING TO DO SO WILL RESULT IN FAILURE NOT COVERED UNDER GAURANTEE.

Replacement stainless steel bowls or spares can be purchased from.

Sheet & Metal Engineering, Rosslyn, Gauteng

Telephone nr: 012 751 1970

Fax: 086 6529 864

Queries: admin@metglique1.co.za